

 
TV Connections Overview

See important information about high-definition video on the other side.

840 Series. Additional audio connections are described in the Supplemental Owner's Guide at www.mitsubishi-tv.com.

HD Carries High-Definition Video

SD Carries Standard-Definition Video

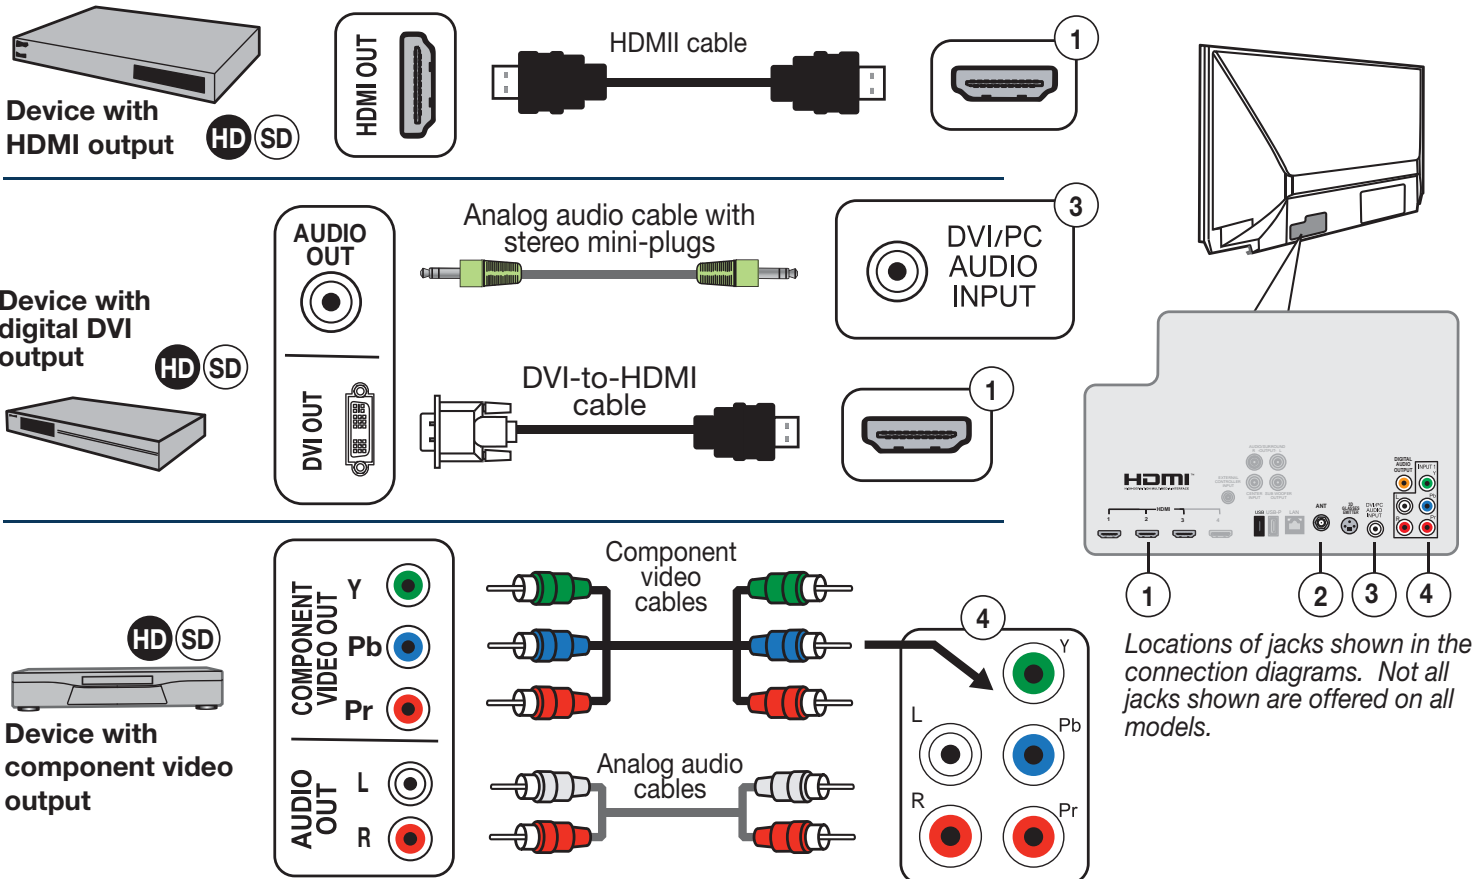

Note: Connect your composite video connector (usually yellow) to the TV's green input jack.

Device with composite video output (SD): Connect a **Composite video cable** to the **COMPOSITE VIDEO OUT** port and **Analog audio cables** (L, R) to the **AUDIO OUT** ports on the device. Connect the video cable to the **Y** port (4) and the audio cables to the **L, R** ports on the TV.

Antenna reception (HD SD)

Over-the-air VHF/UHF antenna
or
Direct cable (no cable box)

These two sources require a channel scan to receive digital channels. See instructions on other side.

 
Cable TV service

Cable TV service with older cable box (SD)

Older cable box with coaxial output


Channel Scan for the ANT (Antenna) Input

You must perform a channel scan to enable reception of digital channels. If you skip this step, the TV will receive only analog channels. The scan will search for local channels available from an antenna or direct cable service (no cable box). **Note:** Direct cable service will not include scrambled or premium channels.

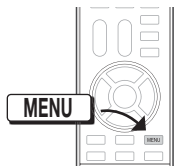

1. Power on the TV.
2. Connect the incoming coaxial cable to the TV's ANT input.
3. Press MENU.

 
4. Open the **Setup > Channel** menu. Press ENTER.




5. Highlight **Ant Air** if connected to an over-the-air antenna. Highlight **Ant Cable** for service over direct cable (no cable box). Press ENTER to add a check.



 6. Highlight **All channels**. Press ENTER to add a check.



 7. Highlight **Scan** and press ENTER. Channel memorization may take up to 15 minutes to complete.



Important Note About High-Definition TV (HDTV)

To view high-definition (HD) pictures you must use a high-definition programming source and suitable cable type (e.g., HDMI or component). Examples of high-definition sources are:

- Cable service with an HD cable box
- Direct cable service without a box
- Satellite service with an HD receiver
- Blu-ray disc player
- Over-the-air antenna

Your cable TV or satellite service provider may charge extra for high-definition service.

 
 
The TV's Test Picture feature displays a high-quality sample image that demonstrates the TV's display capabilities. Press MENU and go to **Picture > Picture+ > Test Picture**.

Setting Up Other Inputs

1. Power on the TV and your A/V devices.
2. Connect one device to the TV, making note of the TV input jack.
The TV will display the **New Device Found** screen if the connection type is detectable.
3. Highlight the device type in the on-screen list and press ENTER to add a check by the device name. The name you select here will appear in the **Input Selection** menu.

New Device Found

Sample
New Device
Found menu

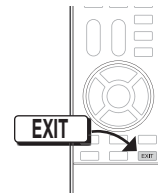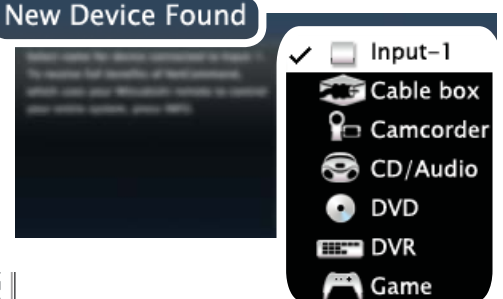


4. Press EXIT to close the **New Device Found** screen.

5. Repeat these steps for each additional device you want to add.

Selecting a Source to Watch

 1. Press INPUT.

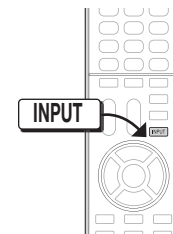

Sample Input Selection menu, antenna input selected

2. Press ◀ ▶ and ▼ to highlight an input icon.
3. Press ENTER to switch to the input.